


One-part concealed transition strip

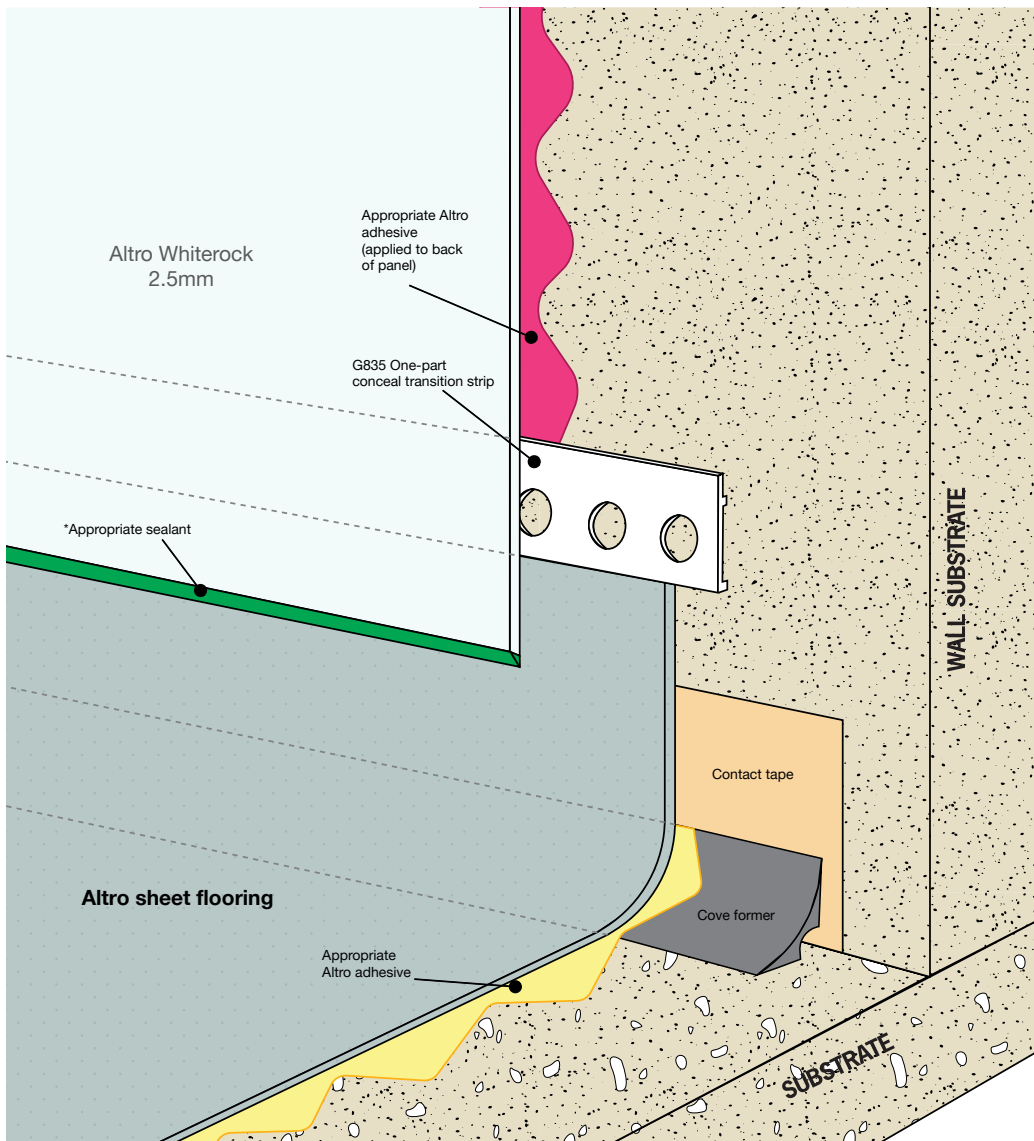

CODES

G835 / 25

One-part concealed transition strip

There are two methods of installing the G835 trim, one is to the back of the Altro Whiterock panels and the other is to install the trim on to the wall substrate. Altro prefers the application of the G835 to the wall substrate.

For additional information please refer to the Altro Whiterock Installation guide.

**In behavioral and mental health facilities, tamper-resistant security sealant must be used per the manufacturers instructions. In other installations we recommend Altro sanitary sealant.*