

Installation techniques and detailing


Transition with access covers

June 2020

For locations where sheet vinyl flooring must be finished to access covers or hatches, such as the Visedge Series*. The sheet vinyl flooring is fixed down then cut in, grooved and hot welded to the PVC insert within the Visedge system.

*Visedge Series and installation instructions from:
Howe Green Limited, Tel 01920 463230, Fax 01920 463231
e-mail info@howegreen.co.uk.

Drawing Ref. D16/03/05

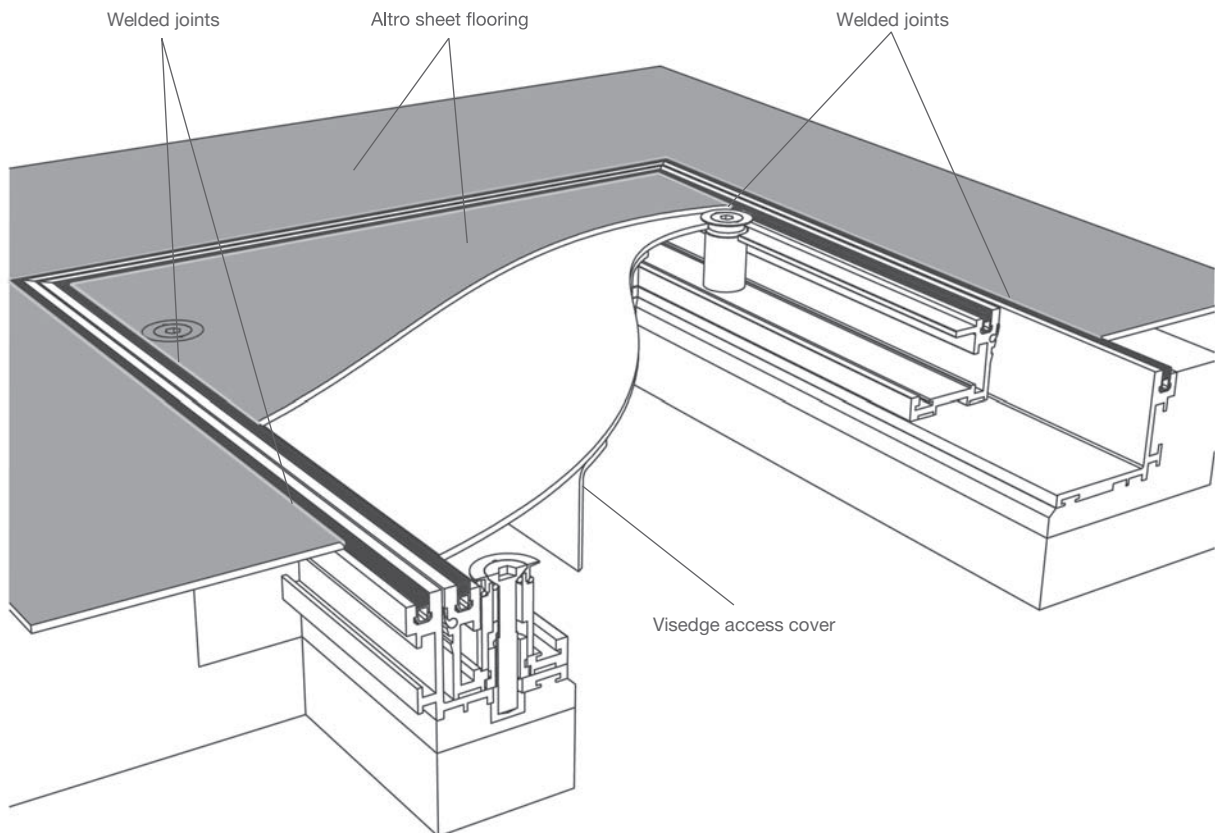

For further information or technical advice

tel: 01462 707600

email: enquiries@altro.com or www.altro.com