

# Installation techniques and detailing


Sit-on cove

June 2020

Cut the sheet vinyl flooring to the perimeter wall and seal with AltroMastic 100. Fit a sit-on cove, supplied by others, over the flooring and fix it to the wall with a suitable

contact adhesive. Not recommended in areas subject to excessive liquid spillage.

**Drawing Ref: D2**

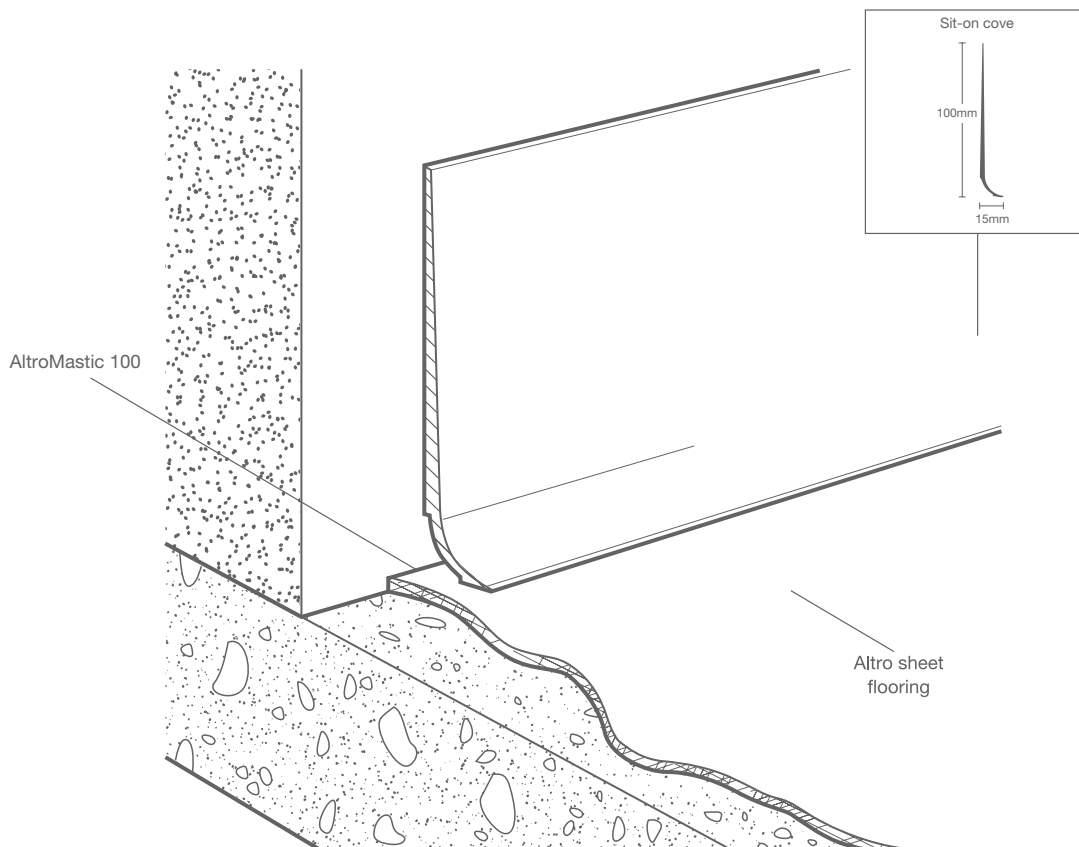

**For further information or technical advice**

**tel: 01462 707600**

**email: [enquiries@altro.com](mailto:enquiries@altro.com) or [www.altro.com](http://www.altro.com)**