CI/SfB reference
(43) T (U47)

November 2005

altro

installation techniques and detailing

Altro resin flooring transition detail

NOVEMBER 2005

Where newly installed Altro resin flooring is required to match surrounding levels a transition detail needs to be incorporated. The thickness of the Altro resin screed system being installed will depend on how much the substrate requires to be reduced in level (i.e. a 9mm AltroCrete PU HD system will require 9mm reduction of substrate). The substrate should be reduced in level using scabblers or diamond grinders (fitted with dust recovery) down to a clean cut toe. The angle of the transition (transition girth) depends upon types of trafficking (i.e. shallow for manual load handling) but must not be too steep to create a trip hazard.

Drawing Ref: RF4/11/05

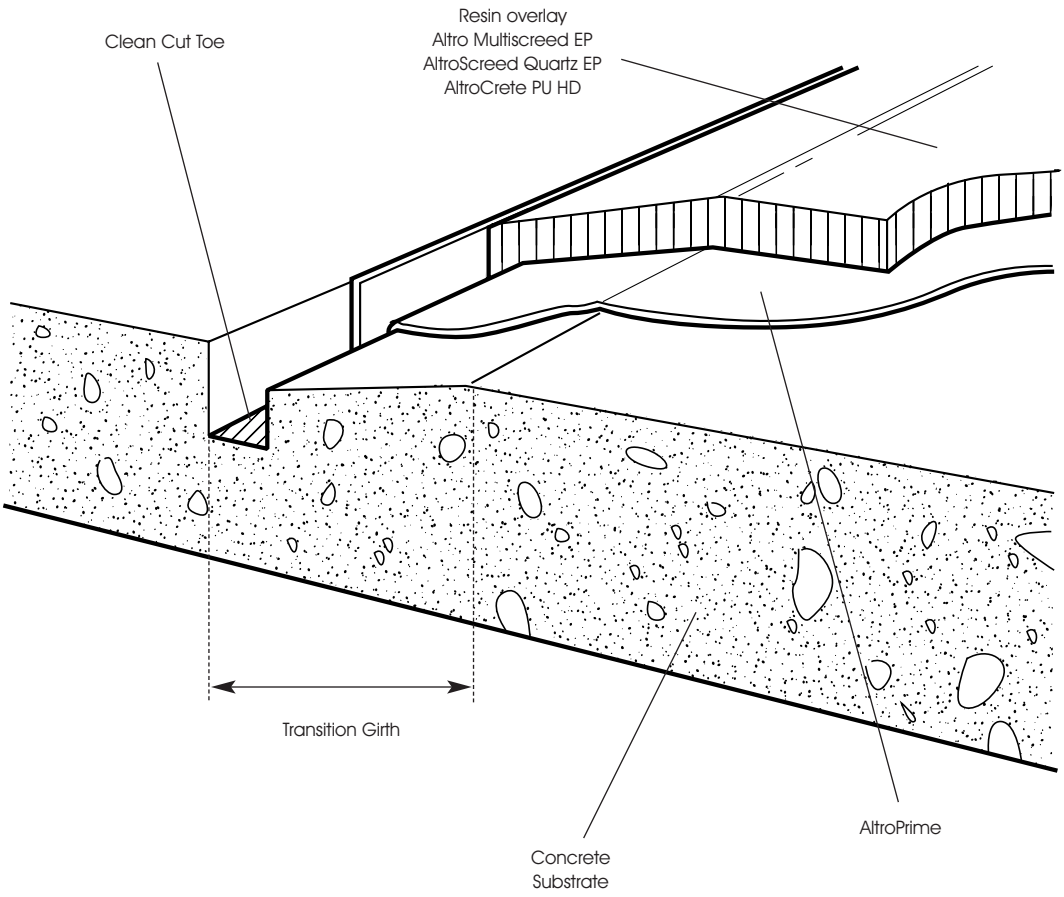

for further information or technical advice

tel: **01462 707600** fax: **01462 707515**

e-mail **enquiries@altro.com** or explore **www.altro.com**

, and Altro are trademarks of Altro Limited.